CHEF CVE612DB

60cm Electric Multi-Function Oven — Dark Stainless Steel

FACTSHEET

80 Litres
GROSS CAPACITY

10A Plug
PLUG & PLAY CONNECTION

Australia
BUILT IN ADELAIDE

Product Overview & Key Features

- **Contemporary Dark Stainless Steel:** Sleek, modern dark stainless finish designed to resist fingerprints and seamlessly integrate with dark or contrast kitchen cabinetry.
- **Plug and Play (10A Socket):** Equipped with a standard 10A plug (2.3kW maximum connected load) for convenient installation without complex hardwiring.
- **Spacious 80L Gross Capacity:** Provides generous volume across 5 shelf positions to easily accommodate multi-dish meals and larger family roasts.
- **3 Essential Cooking Functions:** Offers Fan Bake (fan forced heat), Full Grill, and Defrost settings to handle everyday cooking needs effortlessly.
- **Intuitive Control Dials:** Easy-to-use rotary control knobs coupled with a 120-minute auto-off mechanical timer for accurate timing.
- **Cool-Touch Glass Door & Easy Maintenance:** Multi-glazed door construction keeps external surfaces cool during operation, with removable glass panels for easy cleaning.

Technical Specifications


Specification	Details
Model Number	CVE612DB
Oven Fuel & Type	Electric / Single Built-in Oven
Finish / Color	Mark-resistant Dark Stainless Steel Trim & Handle
Oven Functions	3 (Fan Bake, Full Grill, Defrost)
Capacity	80L Gross (72L Net)
Electrical Connection	10A Plug & Lead Attached (230-240V / 50Hz)
Connected Load / Current	2.3 kW / Maximum 9.6 A
Control Type & Timer	Rotary Control Knobs / 120-Minute Ringer Timer
Temperature Range	80°C – 250°C
Internal Lighting	1 x Incandescent Rear Light
Shelf Positions	5 Positions (2 x Wire Oven Shelves Included)
Included Accessories	1 x Roasting/Grill Dish, 1 x Wire Grill Insert, 2 x Shelves
Warranty	2 Years Domestic Manufacturer Warranty (Parts & Labor)

DIMENSION & FIT GUIDE

Installation Specifications & Cutout Dimensions

TECHNICAL

Appliance & Cabinet Schematics

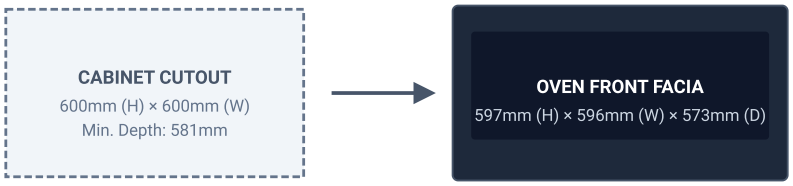

Dimensional Summary Table

Measurement Category	Dimension (mm)	Notes & Fit Guidance
Overall Product Height	597 mm	Includes top and bottom dark stainless fascia trims.
Overall Product Width	596 mm	Fits standard 600mm cabinetry housing module.
Overall Product Depth	573 mm	Excludes control dial protrusion (~20mm).
Flush Fit Cutout Height	600 mm	Standard cabinet opening height.
Flush Fit Cutout Width	600 mm	Standard cabinet opening width.
Flush Fit Cutout Depth	581 mm (Min)	Ensures proper rear clearance for wiring and heat dissipation.
Underbench / Wall Mount	Compatible	Suitable for underbench or eye-level column installation.

Important Installation Note: Surrounding cabinetry materials must be thermally rated up to 100°C. Minimum ventilation clearances must comply with Australian Standards (AS/NZS 60335.2.6) to ensure optimal operating safety.

Power & Clearance Requirements

Ventilation Requirements

A 20mm clearance gap must be maintained at the rear base of the cabinet for effective intake airflow. Do not block front cooling vents situated above the oven door handle.

Electrical Lead Location

The 10A power lead exits at the top rear right of the appliance (1.1m length). The GPO power socket must remain accessible after installation.

USER & OPERATING MANUAL

Instructions for Safe Operation & Care

USER MANUAL

Operating Instructions

1. **Initial Burn-off Procedure:** Before cooking for the first time, remove all packaging and accessories. Set the oven to **Fan Bake** at 200°C for 45 minutes to clear manufacturing residues. Keep the room ventilated.
2. **Selecting Functions:** Rotate the function selector knob (left) to the required setting (Defrost, Full Grill, or Fan Bake).
3. **Setting Temperature:** Turn the thermostat dial (center) clockwise to select your desired cooking temperature (80°C – 250°C).
4. **Setting the Timer:** Turn the 120-minute timer dial (right) clockwise to set cooking duration. A chime will signal when time expires.

Cooking Functions Guide

Function Symbol / Name	Operating Mode	Recommended Use
Fan Bake	Rear element with fan circulation	Multi-shelf baking, roast meats, casseroles
Full Grill	Full top radiant heating element	Toasting, grilling steaks, sausages, browning toppings
Defrost	Fan circulates ambient air	Gentle defrosting of frozen items without heat

Cleaning & Maintenance Guidelines

- **Dark Stainless Exterior Care:** Wipe exterior dark stainless panels using a soft microfibre cloth with warm water and mild detergent. Avoid harsh chemicals, stainless steel polishes, or abrasive cleaners that may strip the protective coating.
- **Door & Glass Cleaning:** Allow oven to cool completely. Release inner glass panel clips to remove glass panes for thorough cleaning with warm soapy water.
- **Enamel Interior:** Clean cavity after use with a soft cloth and mild soap. Avoid abrasive scourers or aggressive oven cleaner sprays.

Basic Troubleshooting

Symptom	Possible Cause	Remedy
Oven does not heat up	Power plug disconnected or switch off	Verify 10A plug connection and check main switchboard breaker.
Internal light not working	Bulb blown or loose fit	Replace bulb with a 25W High-Temp E14 rated light bulb.
Uneven cooking	Incorrect shelf level or	Adjust shelf level or recalibrate temperature selection